

***Thank you for choosing High Lifter!***

**HL-ROOF-RZRPROXP**

Polaris RZR Pro XP - Roof Kit - Instructions

***Lift Kits • Tires • Suspension • Snorkels***

***HIGHLIFTER***

***Axles • Clutch Kits • Portals • Rad Kits***

**Contact Us**

**Mon-Fri 8am - 5pm CST**

**highlifter.com**

**sales@highlifter.com**


**800-699-0947**




## Parts Diagram:

Adhesive Foam Seal  
(1ea) HL-CAGE-FOAM




 M6x25 S/S Flanged  
Button Head Screw  
(8ea) SMFBHS625

 1/4"x1" S/S Sealing  
Washer  
(8ea) SFEN141-SEALING


 M6-1.0 Clip Nut  
(8ea) CLIPNUT-M6-1.0

## Instructions:

1. Remove the factory roof if you have one.
2. Clean and prepare the surface of the roll cage for the adhesive foam seal.
3. An entire 10 ft roll of **adhesive foam seal** will be used. Cut and apply the strips to the top of the roll cage as seen below.

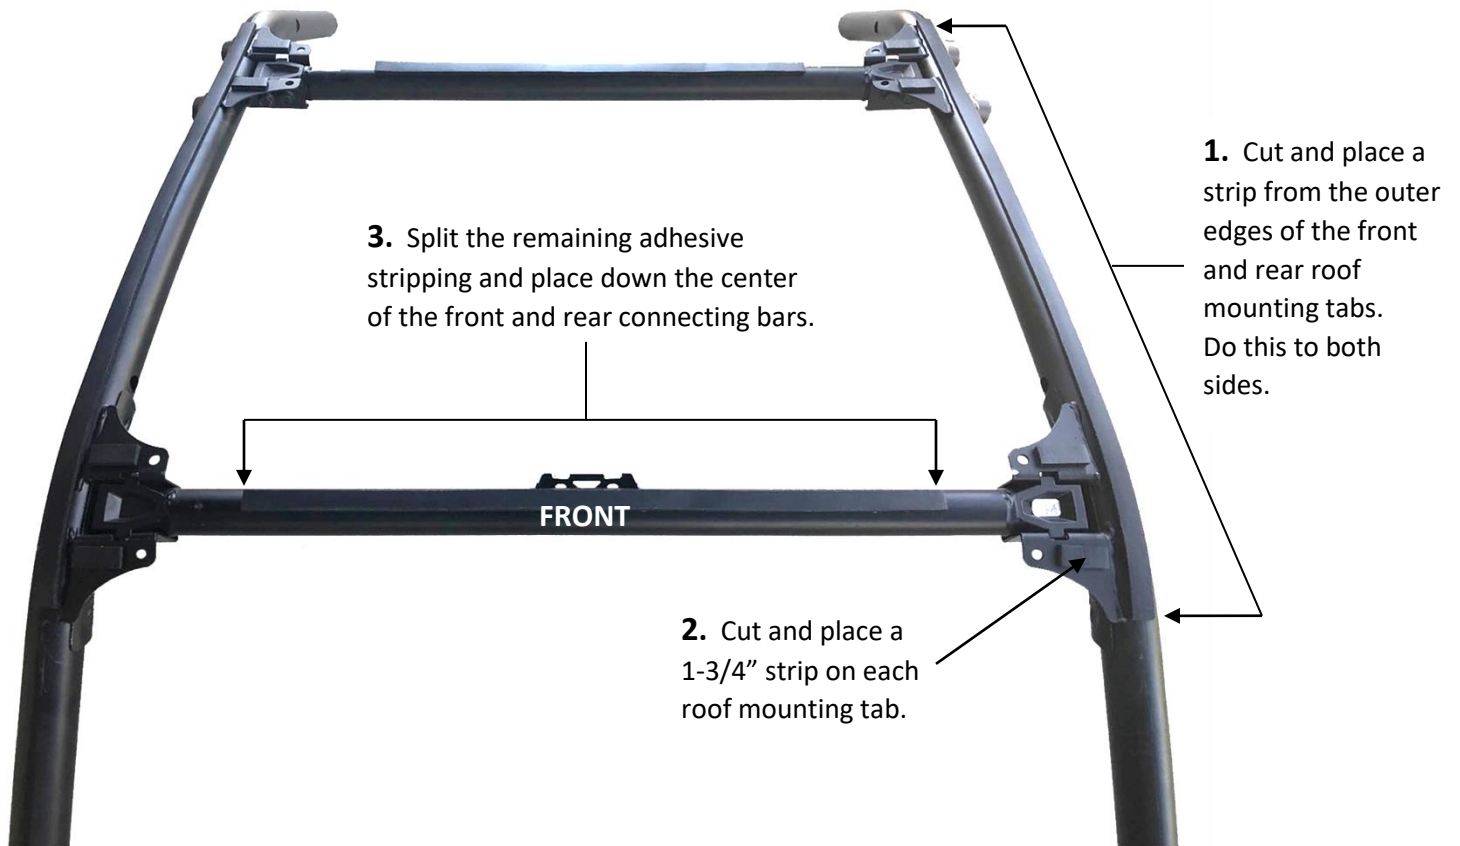

4. Place the roof onto the roll cage and align the holes to the mounting tabs.

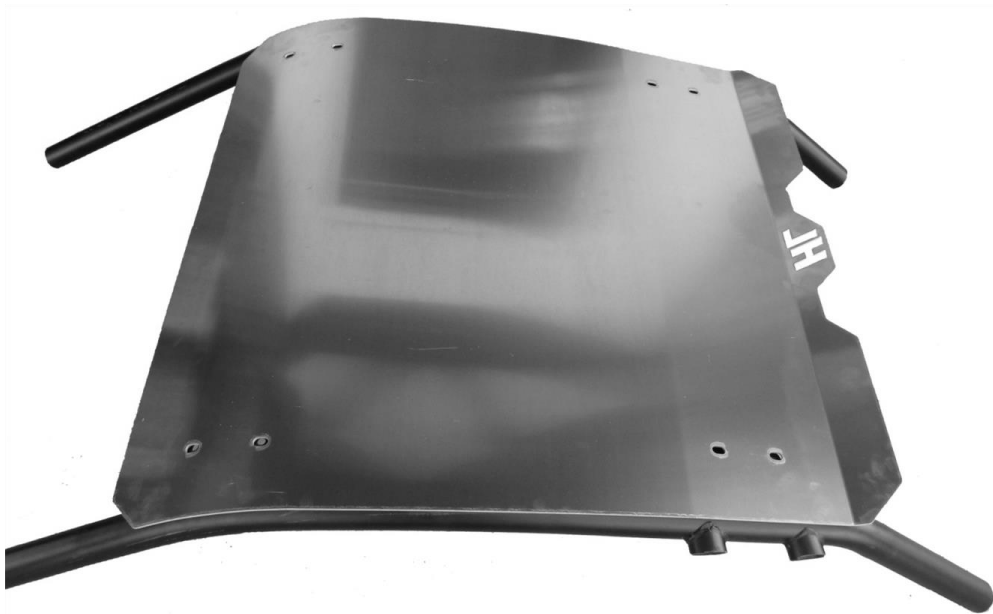

5. At the bottom side of the roof, slide a 6mm clip nut onto each roof mounting tab.



6. At the top of the roof, slide a **sealing washer** onto a **flange button head screw**. Then insert it through the roof and the mounting tabs. Fasten it down and be careful not to strip the threads.



7. Repeat the steps for all the holes and make sure the roof is straight.