



FALCON RIDGE

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of Bobcat 3400
Folding Polycarbonate Windshield
BC-3400-WD03 / 50-40232

NOTICE: Please check contents of package for any damage and make sure all parts fit correctly and you are happy with the product before removing protective film. Once the film is removed you cannot return the product for a full refund.

Be sure to read these instructions thoroughly before opening and installing the Bobcat 3400 Polycarbonate Windshield.


1. Start by pulling everything out of the box and find a clean area to lay it down and install the hardware. Check over the parts included in the cartons with the parts list shown below:

1 ¾" Loom Clamps-----8 each
1" Stainless Steels Bolts-----12 each
1 ¼" Stainless Steels Bolts-----4 each
Stainless Steel Washers-----34 each
Stainless Steel Lock Nuts-----8 each
Plastic Thumb Nuts-----6 each
Stainless Steel Nuts-----4 each
55" Rubber Gasket-----1 each
Bent Polycarbonate Braces-----2 each
Polycarbonate Windshield-----1 each


If any parts are damaged or missing please contact customer service at (606) 845-7439.

2. Next take the rubber gasket and starting at one end firmly place along entire bottom edge of the Windshield. You will need to peel back the protective film from the edge to install the gasket. If you leave the bulk of the protective film on while doing the installation, you can keep from scratching the windshield.
3. Next take the two bent Polycarbonate braces and install them on the windshield. You will notice that one of the braces is shorter; this is the top brace and will go on the outside of the windshield at the top of the windshield. The bend will be above the bolts when installed. The bottom brace will go just below the hinge on the inside of the windshield. As before, the bend will be above the bolts, when installed the brace should look like a shelf pointing towards the rear of the vehicle.



4. Now you are ready to place the windshield on the Bobcat and attach to the roll cage. NOTE: THE BEND AT THE TOP OF THE WINDSHIELD SHOULD GO BELOW THE TOP TUBE. The diagram below shows the proper placement for the hardware. Install the clamps as shown for the top two slots in the windshield only. Use the 1" bolts for this application.

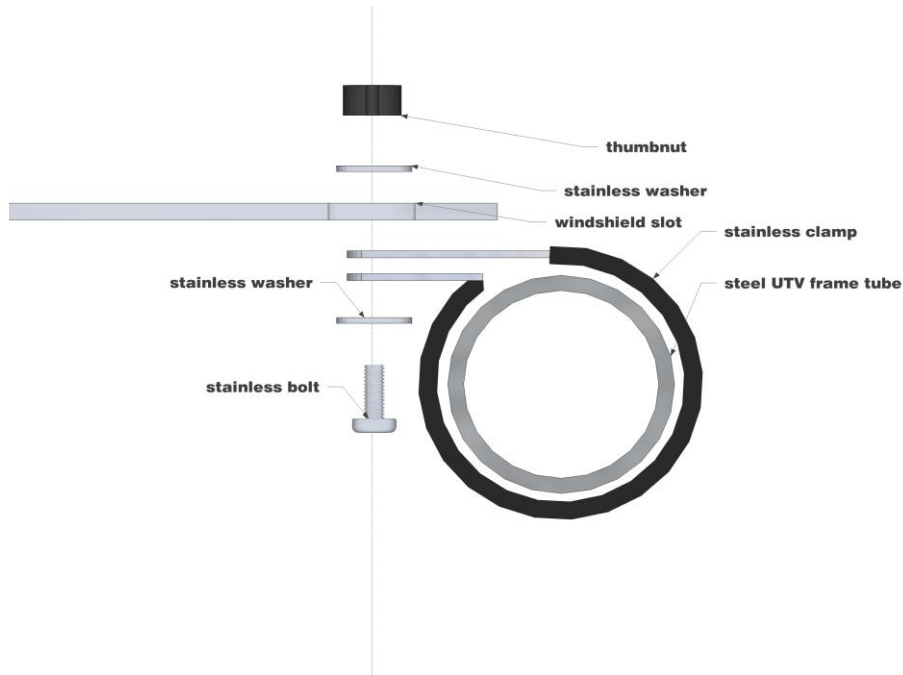

5. Now install the clamp for the slot right above the hinge. You will use the 1 1/4" bolts for this. Below is the diagram showing how this is installed. You will have some of the bolt sticking out towards the front of the vehicle. This is to hold the bottom section of the windshield when it is in the raised position. You will use the same thumb nut for the raised and lowered positions.

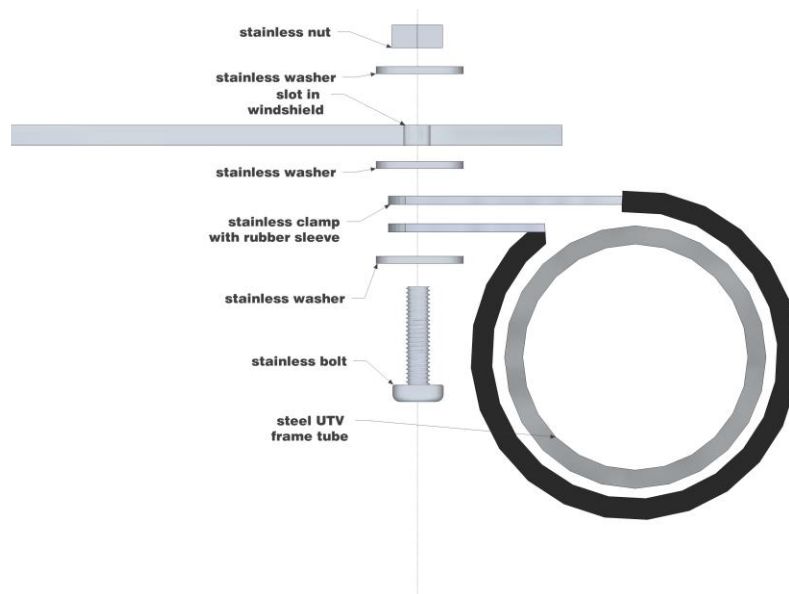

6. Finally install a clamp around the tube below the hinge as shown below. You will use the 1 ¼" bolts here. This clamp holds the bottom of the windshield down.

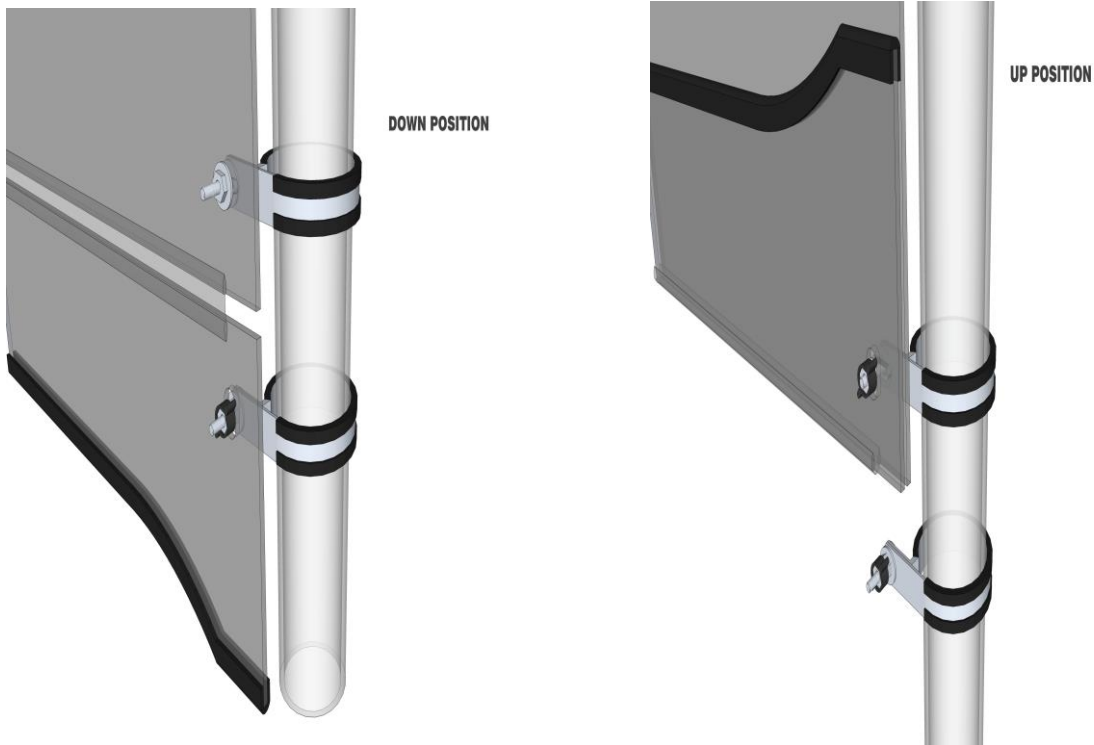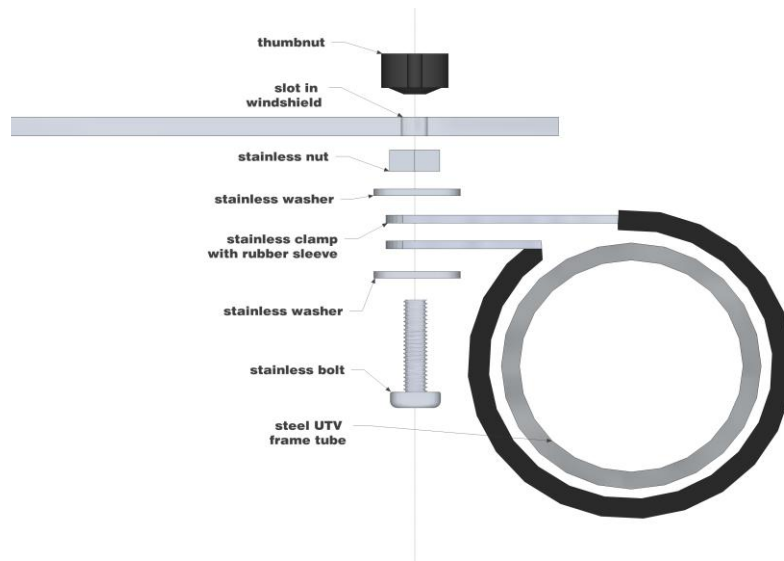

7. Now you are ready to take it out and enjoy. To clean the windshield, always clean using a liquid of some sort to decrease the chance of scratches. We recommend using micro fiber cloths that are readily available at any dollar store. Any window cleaner will work fine; just remember to use a soft clean rag or micro-fiber cloth to clean it.

Thank you for your purchase!

Warranty

To The Owner of this Product:

Thank you for purchasing one of Falcon Ridge's Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.